

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Model: KEMS307DBS2  
(BLACK-STAINLESS)

<b>Illus.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>	<b>Illus.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>	<b>Illus.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.	21		Rail, Side	37	4450334	Thermostat (TOD) (Temp.) SPST
1	4450856	Trim, Side RH Black	4450583		Right Side	4449809		Screw
	4450859	LH Black	4450584		Left Side	4450527		Base, Chassis
	4449747	Screw	4448444		Grommet	4449809		Screw
4	4448520	Bumper, Door	4449154		Screw	4448933		Retainer, Gasket
6	4451054	Divider, Vent	25	4450528	Side, Module (R.H. & L.H.)	4449154		Screw
	4449809	Screw	4449809		Screw	50	4450543	Cover, Back
7	4451166	Partition	26	4451169	Back, Module	4449809		Screw
	4449809	Screw	4449809		Screw	51	4448461	Trim, Bottom
9	4449009	Tube, Vent	27		Liner, Oven (Not serviceable)	4159465		Screw
	4449154	Screw	29	4450026	Sensor	4450403		Chassis, Back
11	4448972	Oven Light Assy		4449154	Screw			
	4449748	Screw	30	4449845	Bracket, Support			
14	4450417	Frame, Front		4449809	Screw			
	4449040	Screw	31	4450819	Switch, Door			
15	4449372	Gasket, Door	32	4449369	Vent Box Assy.			
19	4450542	Support, Insulation		4449809	Screw			
	4449809	Screw	33	4450280	Deflector, Vent			
			34	4449074	Vent, Center			
				4450038	Screw			
				4159465	Screw			


**FOLLOWING PARTS  
NOT ILLUSTRATED**

**INSULATION**

4449316 Insulation, Wrap  
4450365 Insulation, Back  
4450128 Insulation, Bottom

# CONTROL PANEL PARTS

For Model: KEMS307DBS2  
(BLACK-STAINLESS)

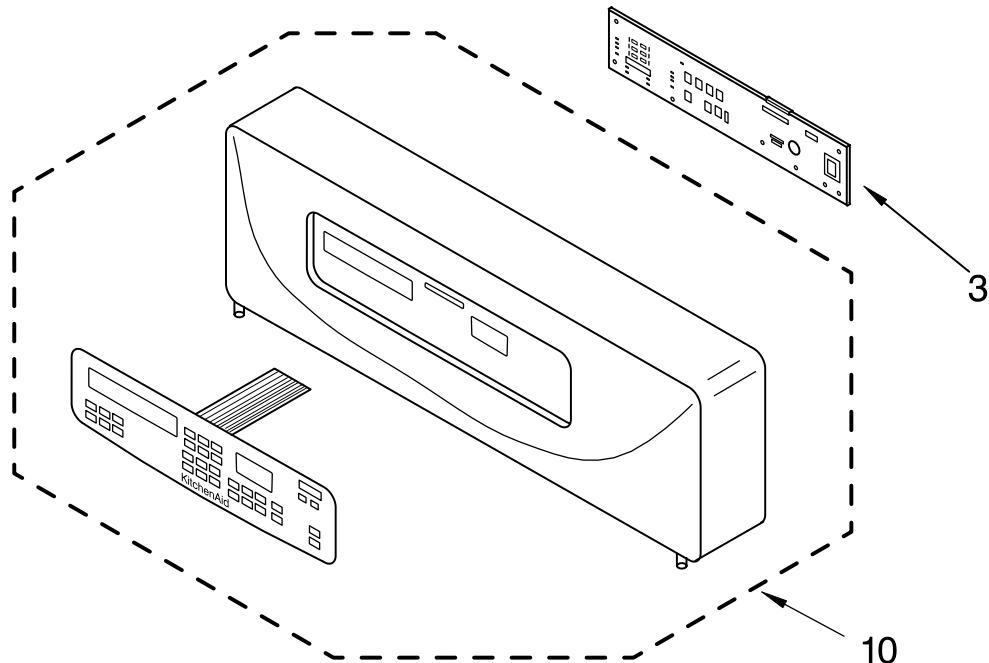

Illus.	Part No.	DESCRIPTION
--------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

3	4448869	Microcomputer
	4449745	Screw
10	4451063	Panel, Control W/Membrane Switch


## LITERATURE PARTS

- LIT4450412 Installation Instructions
- LIT4451399 Use & Care Guide (Oven)
- LIT4451400 Use & Care Guide (Microwave)
- LIT4450786 Cooking Guide
- LIT4449066 Cookbook (T/C Oven)
- LIT4454773 Tech Sheet (Oven)
- LIT4449264 Easy Set Guide
- LIT4451052 Easy Use Guide M/W

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN DOOR PARTS

For Model: KEMS307DBS2  
(BLACK-STAINLESS)

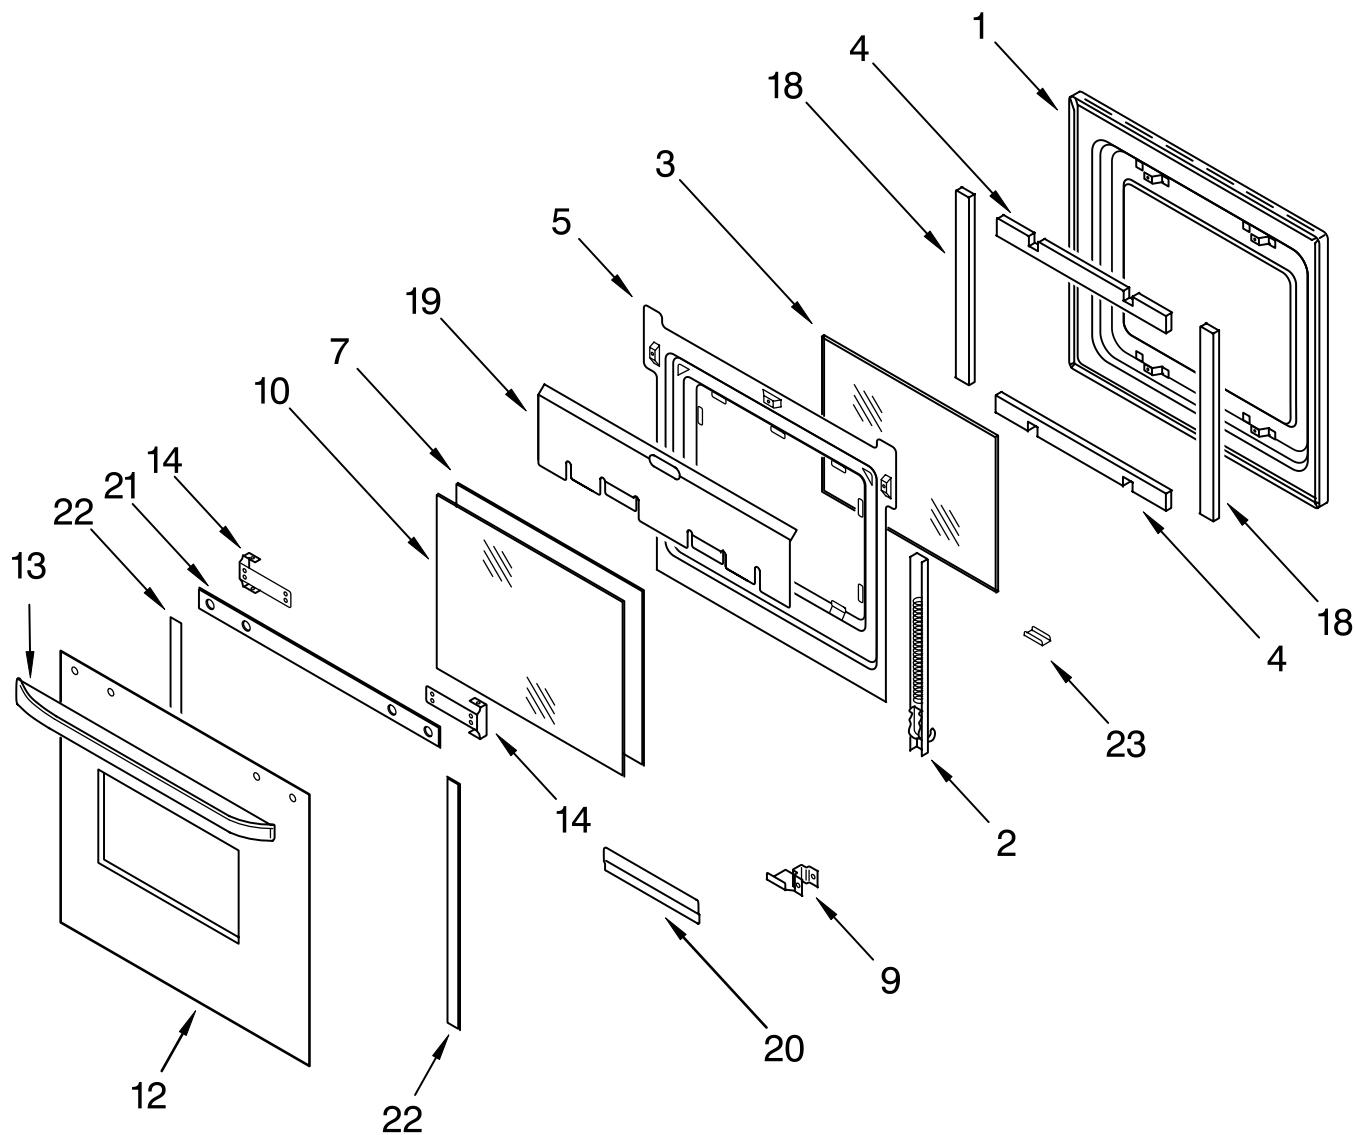


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.								
1	4450429	Door Liner	5	4450423	Retainer, Glass	14	4450813	Bracket, Handle
2	4451174	Hinge, Door	4449809	Screw	14	4451040	Screw	
	4449743	Screw	7	4449263	Glass, Inner	18	4448707	Insulation, Sides
3	4449259	Glass, Inner	9	4450470	Retainer, Glass	19	4450362	Shield, Heat
4	4448680	Insulation, Top and Bottom Door	10	4449263	Glass, Inner	14	4449809	Screw
			12	4451377	Door Glass & Panel Assy.	20	4449031	Retainer, Glass
			13	4448414	Door Handle	21	4450837	Seal, Door Top
						22	4450838	Seal, Side
						23	4450863	Retainer, Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# LATCH PARTS

For Model: KEMS307DBS2  
(BLACK-STAINLESS)

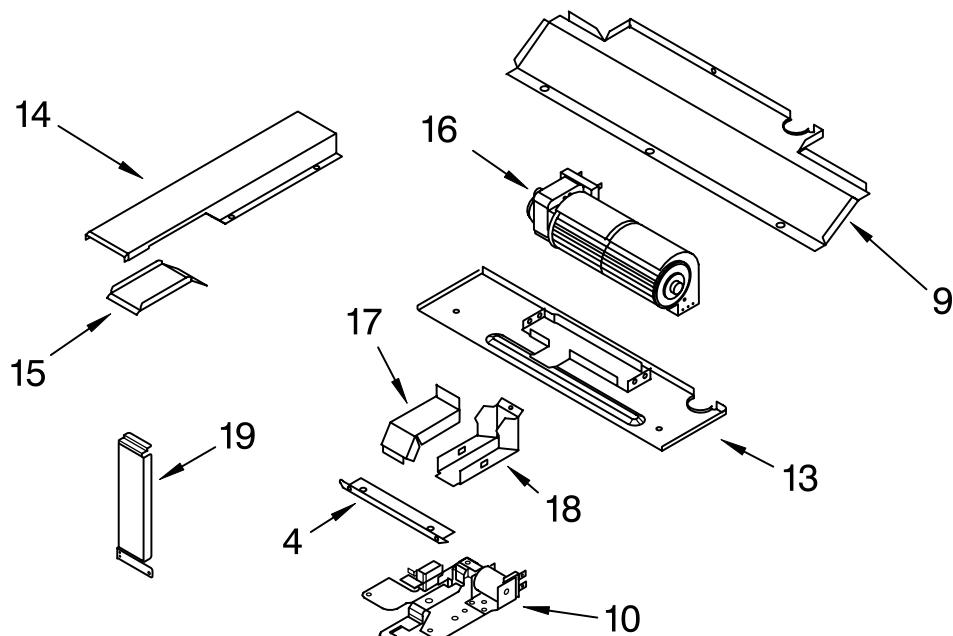

Illus.	Part No.	DESCRIPTION
--------	----------	-------------

**NOTE:** The screws and nuts required to attach a part are listed immediately following that part.

4	4450051	Deflector, Latch
	4449154	Screw
9	4450408	Baffle, Rear
	4449809	Screw
10	4454710	Latch Assy.
13	4450522	Plate, Adapter
14	4449124	Vent, Top
15	4449959	Vent, Bottom
	4449809	Screw
16	4450919	Blower
17	4449883	Vent, Top
18	4450406	Vent, Bottom
19	4449906	EXT Filler

## IMPORTANT PRODUCT SAFETY INFORMATION

**ADVISE CONSUMERS OF AN ELECTROCUTION HAZARD WITH DO – IT – YOURSELF REPAIRS OF MICROWAVE OVENS.**


The U.S. Consumer Product Safety Commission warns against do-it-yourself repairs of microwave ovens. Microwave ovens use high voltage which makes it particularly hazardous for consumers to remove the cover and touch electrical parts.

**STRONGLY RECOMMEND THAT CONSUMERS HAVE PROFESSIONALS REPAIR MICROWAVE OVENS.**

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INTERNAL OVEN PARTS

For Model: KEMS307DBS2  
(BLACK-STAINLESS)

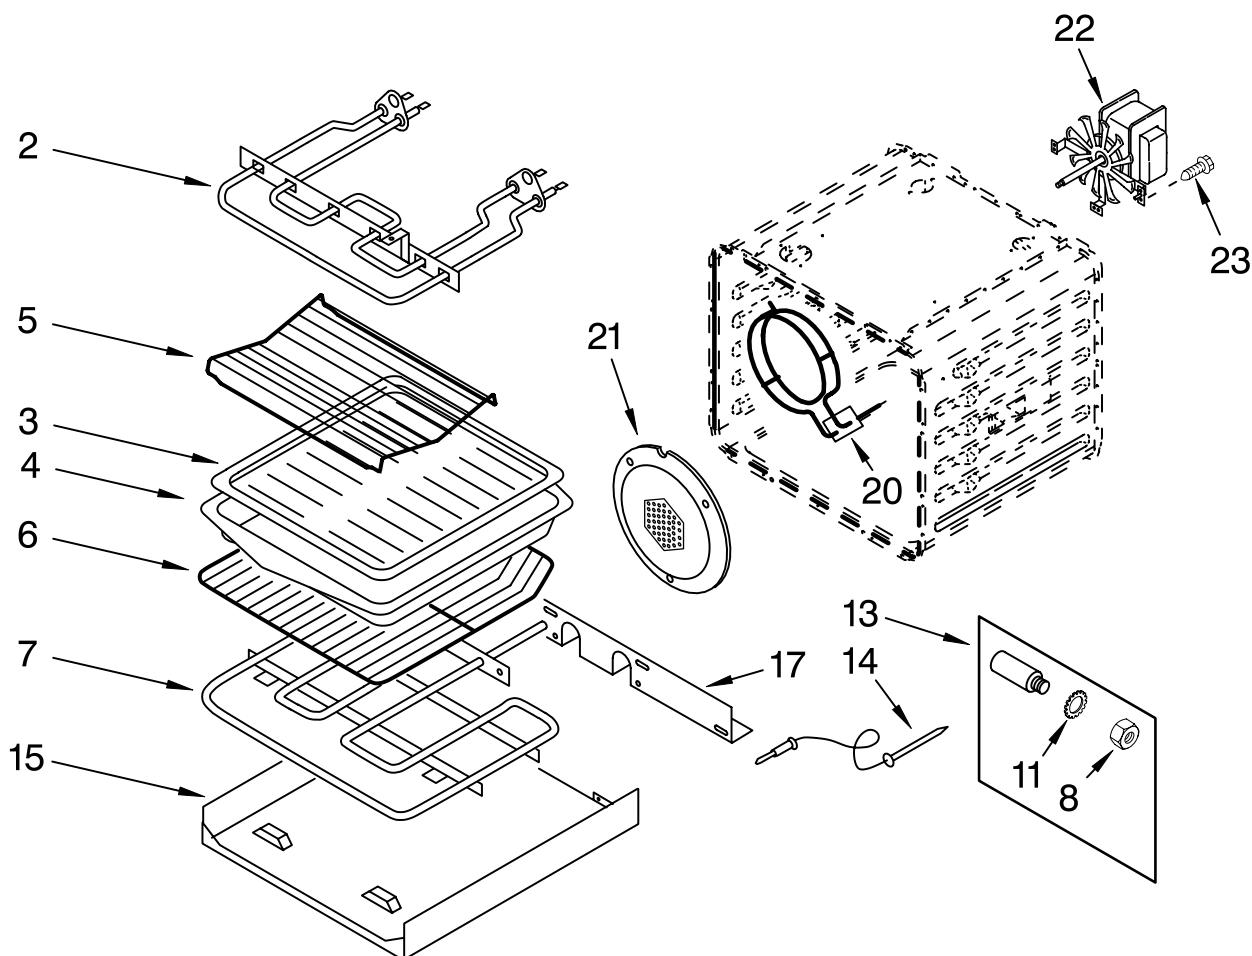


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
2	4448701	Element, Broil	8	4448881	Nut, Hex	20	4448841	Element, Convection
	4449154	Screw	11	4448882	Washer, Lock		4449154	Screw
3	3147563	Grill, Broiler	13	4451355	Jack, Meat Probe	21	4448418	Cover, Fan
4	3147845	Pan, Broiler	14	4448948	Probe, Meat		4449154	Screw
5	3181534	Rack, Roasting	15	4448723	Tray, Bake	22	4448952	Convection Motor
6	4448717	Rack, Oven	17	4450039	Cover, Bake Tray		4449154	Screw
7	4448695	Element, Bake	4449809		Screw	23		

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CABINET AND STIRRER PARTS

## **For Model: KEMS307DBS2 (BLACK-STAINLESS)**

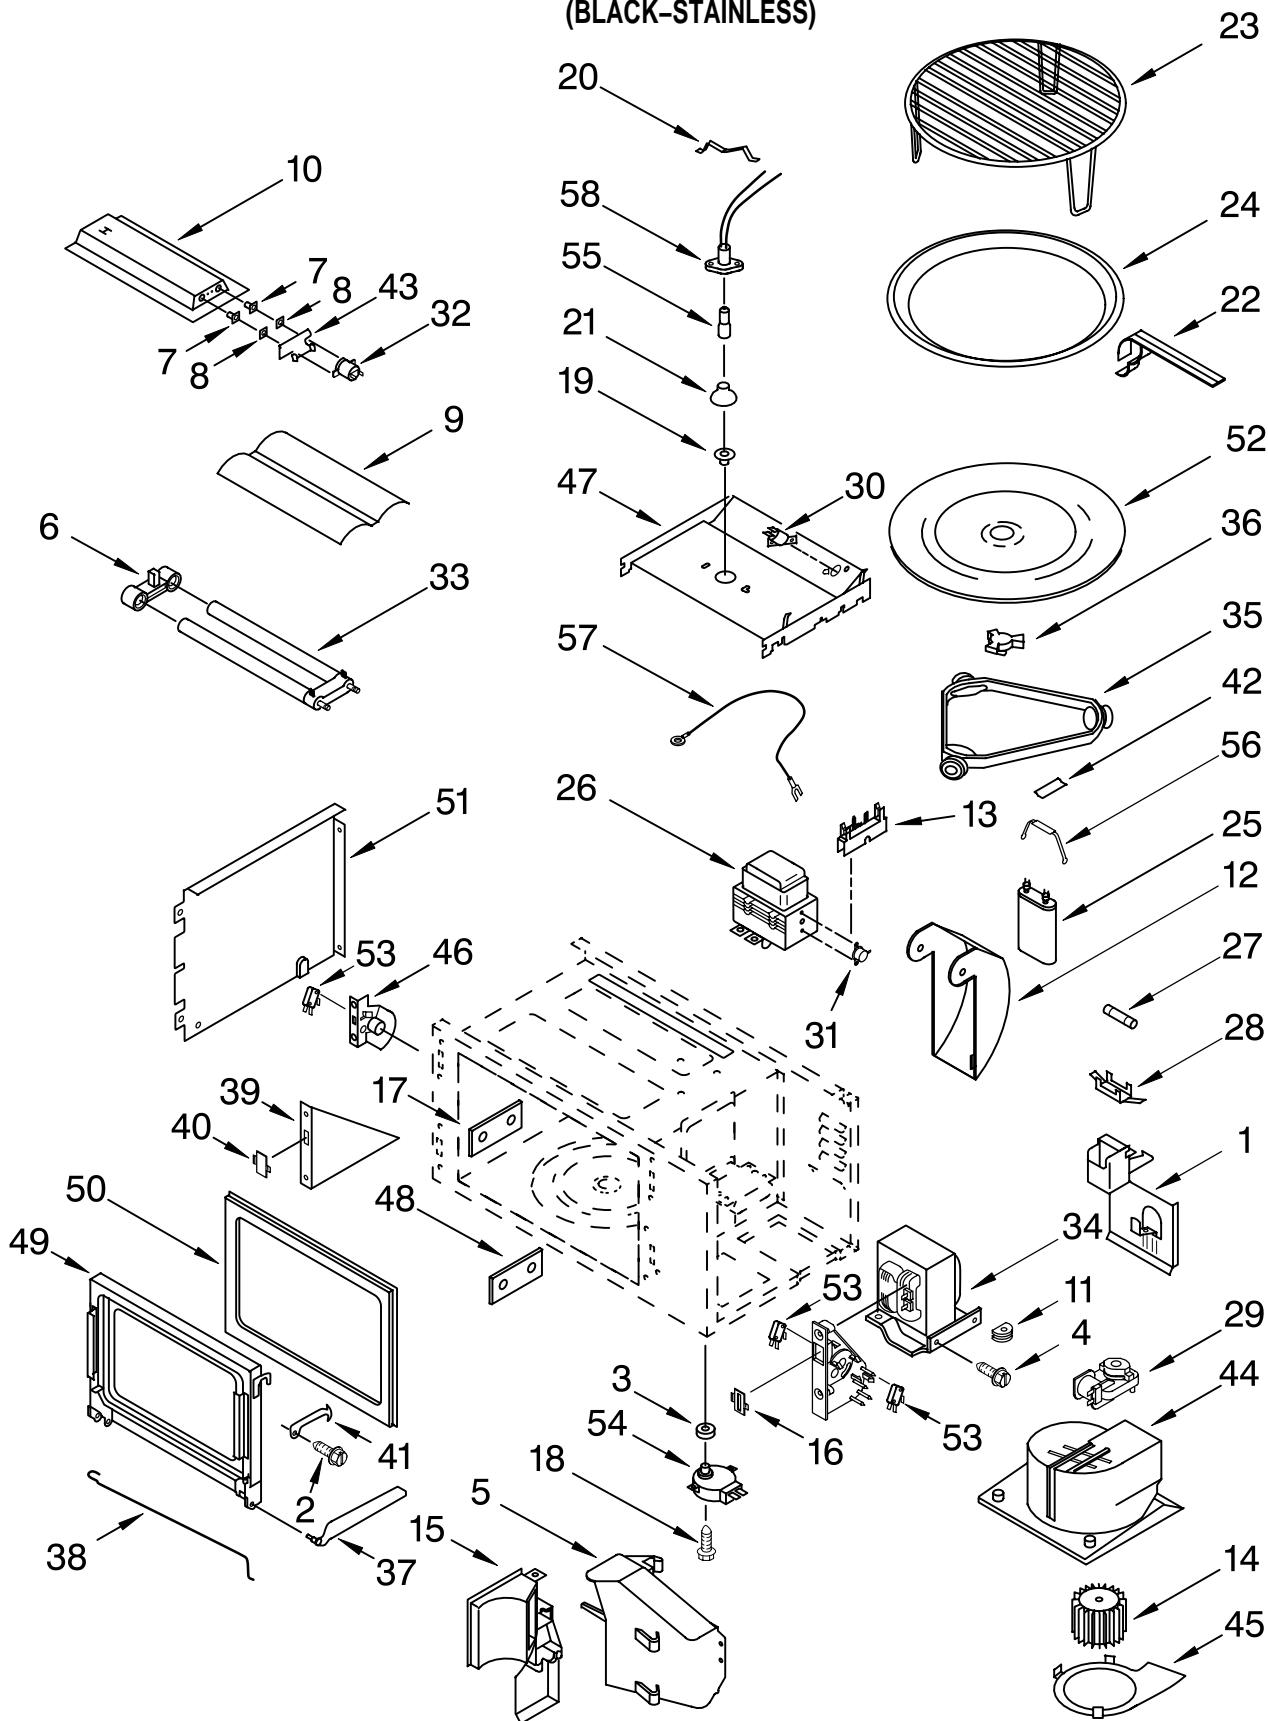

**FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST**

# CABINET AND STIRRER PARTS


For Model: KEMS307DBS2  
(BLACK-STAINLESS)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	4375299	Bracket, Capacitor	24	4375191	Crisp Plate	41	4375330	Door Strap
2	4375313	Screw	25	4375020	Capacitor	42	4375331	Grill Plate
3	4375037	Rubber Ring	26	4375072	Magnetron	43	4375332	Bracket, Thermostat
4	4375038	Screw	27	4375321	Fuse	44	4375333	Fan Cap
5	4375314	Air Duct, Magnetron	28	4375231	Block, Fuse	45	4375334	Fan Cap Bottom
6	4375253	Support, Tube	29	4375278	Motor, Blower	46		Holder, Switch
7	4375254	Plug, Ceramic	30	4375279	Thermostat	47	4375335	Left
8	4375255	Bushing	31	4375079	Thermostat	48	4375336	Right
9	4375256	Reflector	32	4375281	Thermostat	49	4375337	Isolation Plate
10	4375257	Chamber, Reflector	33	4375282	Q Tube Assembly	50	4375338	Cover Plate (Lower)
11	4375315	Damper	34	4375286	Transformer	51	4375339	Door Plate
12	4375260	Duct, Inlet	35	4375344	Ring Assembly	52	4375340	Inner Frame
13	4375316	Insulation, Switch	36	4375345	Shaft	53		Plate, Side
14	4375322	Fan Wheel	37		Hinge, Door	54	4375342	Left
15	4375317	Duct, Air		4375323	Left Side	55	4375341	Right
16	4375264	Block, Slide		4375324	Right Side	56	4375343	Turntable
17	4375248	Cover Plate, Upper	38	4451009	Torsion Spring	57	4375346	Switch
18	4375035	Screw	39		Bracket, Hinge	58	4375347	Motor, Turntable
19	4375318	Lens, Lamp		4375327	Left	59	4375348	Light
20	4375319	Spring		4375328	Right	60	4375349	Rectifire
21	4375320	Reflector	40	4375329	Inlet	61	4375350	Cable
22	4378400	Pan Handle				62	4375351	Lamp Holder
23	4375276	Rack						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MICROWAVE COMPARTMENT PARTS

For Model: KEMS307DBS2  
(BLACK-STAINLESS)

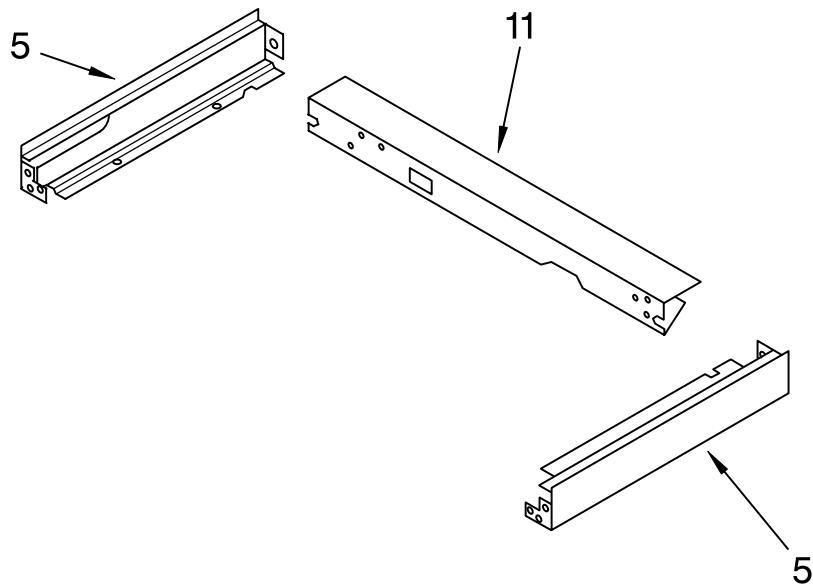


Illus.	Part	
No.	No.	DESCRIPTION
5		Support Rails
	4450404	Right Side
	4450405	Left Side
	4449809	Screw
11	4449703	Rear Channel
	4449809	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP VENTING PARTS

For Model: KEMS307DBS2  
(BLACK-STAINLESS)

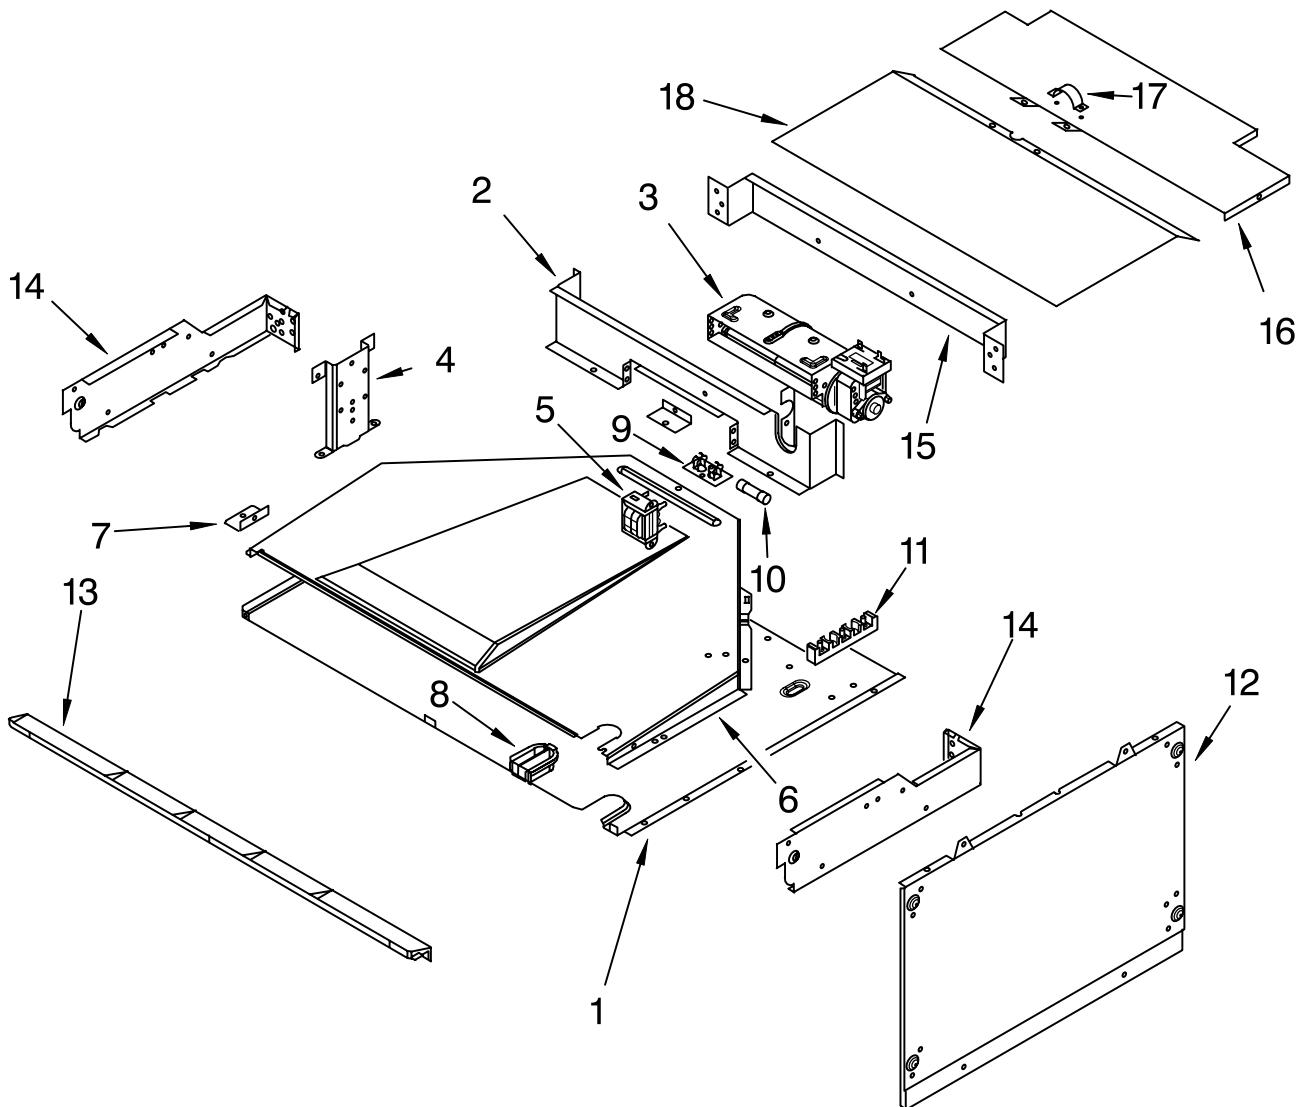


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.								
1	4450378	Cover, Top	6	4450367	Exhaust Duct	14		Side, Control Top
	4450118	Nut	7	4450027	Bracket, Duct	4448371		Right
	4449809	Screw	4449809		Screw	4448372		Left
2	4448935	Baffle, Blower	8	4449964	Grommet	4449809		Screw
3	4450920	Blower	9	4450311	Holder, Fuse	15	4450658	Back, Control
	4449809	Screw	4449154		Screw	4449809		Screw
4	4450066	Bracket, Transformer	10	309796	Fuse	16	4450551	Cover, Top Rear
5	4450328	Transformer, (Lights)	11	4449868	Block, Terminal	4449809		Screw
	4449809	Screw	3196181		Screw	17	4448664	Clamp
			12	4450401	Side, Combo	4449809		Screw
			4449809		Screw	18	4450554	Cover, Top Front
			13	4449767	Vent, (Control Panel)	4449809		Screw
			4450038		Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MICROWAVE DOOR PARTS

For Model: KEMS307DBS2  
(BLACK-STAINLESS)

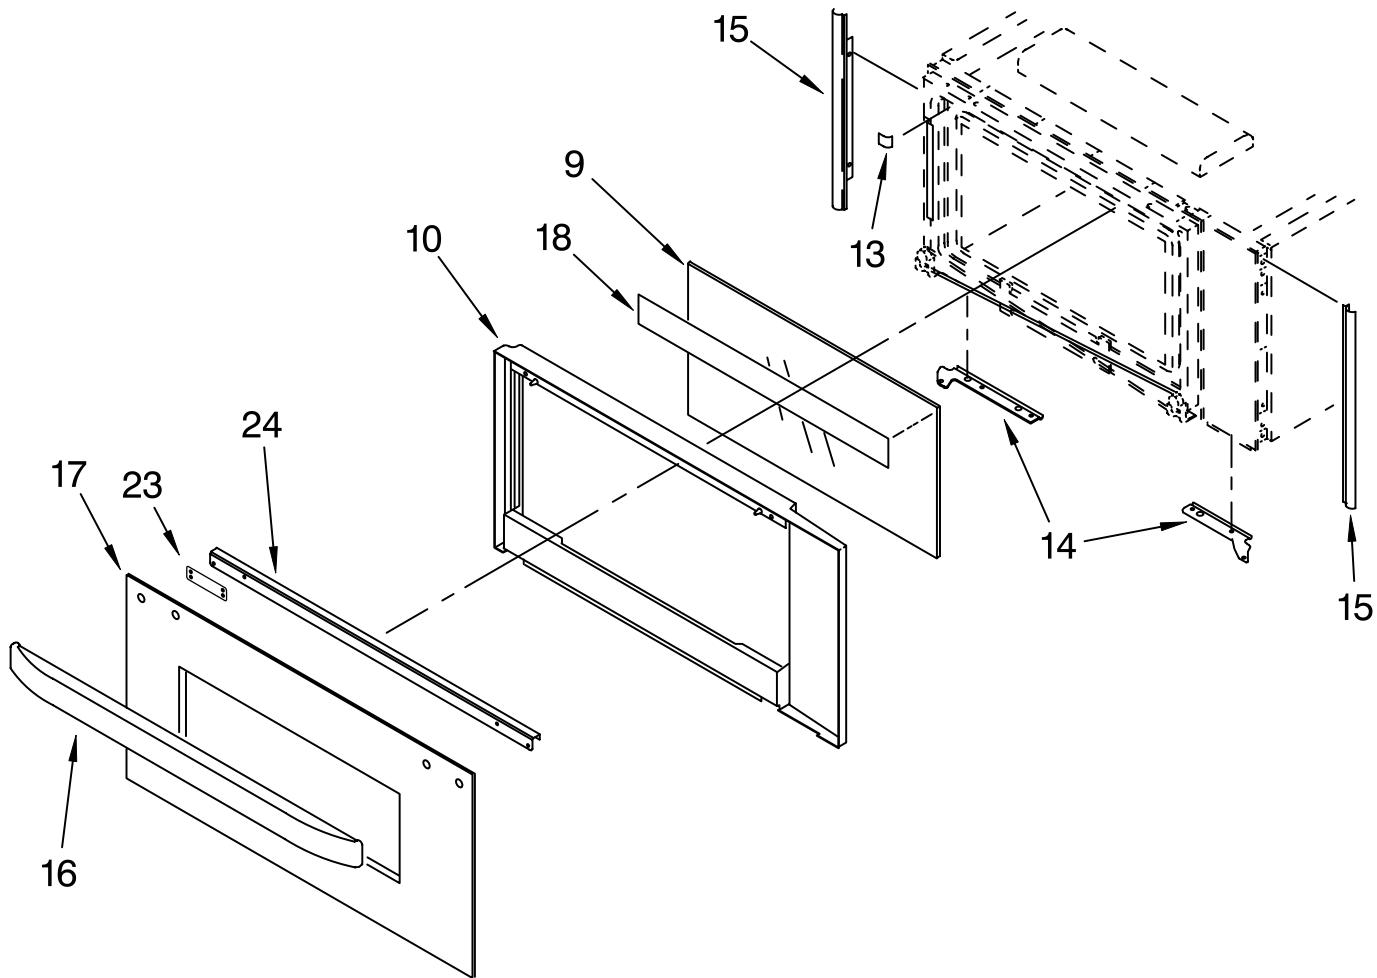

Illus.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
9	4448937	Glass, Middle
10	4450946	Frame, Door
	4450038	Screw
13	4450265	Tape, Foam

Illus.	Part No.	DESCRIPTION
14		Bracket, Mounting
	4449141	Right Side
15	4449142	Left Side
	4449809	Screw
15	4449083	Filler, Side
	4449086	Right
	4449086	Left
	4449809	Screw

Illus.	Part No.	DESCRIPTION
16	4448414	Handle, Door
	4451379	Glass, Outer & Panel Assy.
18	4451386	Tape, Foil
	23	4451055
24	4450961	Spacer
	4451040	Bracket, Handle
		Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Model: KEMS307DBS2  
(BLACK-STAINLESS)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<b>PAINT, TOUCH-UP (1/2oz.)</b>								
	72017	White						
	261869	Cord Brown						
	72032	Black						
<b>PAINT, SPRAY</b>								
	350930	White						
	261900	Citrine White						
	830864	Black						
<b>ADHESIVE</b>								
	591014	Adhesive Loctite (1/3 oz.)						
	482338	Sealer, Silastic (3 oz.)						
<b>SPLICING WIRES--25FT.</b>								
<b>LENGTH</b>								
	242828	Wire (12 Ga. 150 c Black)						
	242820	Wire (14 Ga. 150 c Black)						
	242821	Wire (14 Ga. 150 c Blue)						
	242822	Wire (14 Ga. 150 c Brown)						
	242830	Wire (14 Ga. 200 c Brown)						
	242823	Wire (14 Ga. 150 c Green)						
	242824	Wire (14 Ga. 150 c Orange)						
	242829	Wire (12 Ga. 150 c Red)						
	242825	Wire (14 Ga. 150 c Red)						
	242831	Wire (14 Ga. 200 c Red)						
	242826	Wire (14 Ga. 150 c White)						
	242827	Wire (14 Ga. 150 c Yellow)						
	242832	Wire (14 Ga. 200 c Yellow)						
<b>FOLLOWING PARTS NOT ILLUSTRATED</b>								
	4378950	Filler Kit (BL)						
	814381	Kit, Pin Hinge						
	4448950	Screw, Installation						
<b>WIRING HARNESS PARTS</b>								
	4450951	Harness, Door						
	488366	Clamp						
	4449809	Screw						
	4454709	Harness, Latch						
	4450291	Harness, Transformer						
	4449809	Screw						
	4454708	Oven, Main						
	4450831	Ground (M/W)						
	4450800	Screw						
	4449809	Screw						
	4450950	Conduit, Combo						
	4450800	Screw						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST